

DRIVERS OPERATING INSTRUCTIONS




CARGOBULL
NORTH AMERICA



UNIT DISPLAY & CONTROL PANEL



- 1 ZONE ENABLE BUTTON & TEMPERATURE COOL / HEAT STATUS
- 2 TEMPERATURE SET POINT
- 3 BOX TEMPERATURE
- 4 ON/OFF BUTTON
- 5 POWER SOURCE: DIESEL OR SHORE POWER
- 6 SETTINGS MENU
- 7 MENU SELECTION
- 8 CONFIRM SELECTION
- 9 LANGUAGE SELECTION
- 10 MANUAL DEFROST BUTTON
- 11 ALARM

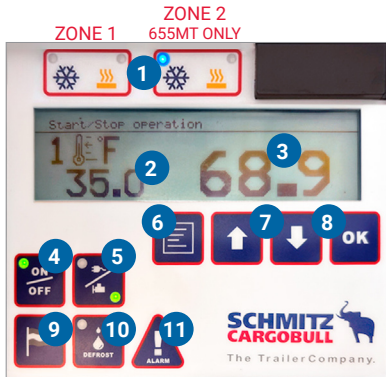

HOW TO:

TURN ON TRU [Transport Refrigeration Unit]



PRESS **ON/OFF** BUTTON

DISPLAY WILL POWER ON AFTER
APPROXIMATELY 5 SECONDS



HOW TO: SELECT OPERATING MODE




PRESS TO SELECT DIESEL ENGINE
OR SHORE POWER MODE



SHORE POWER MODE:

MUST SWITCH TO SHORE POWER MODE
WHEN PLUGGED IN, FOLLOW PLUG-IN
PROCEDURE.

WHEN OPERATING ON SHORE POWER
AND TRAILER IS DISCONNECTED, THE TRU
AUTOMATICALLY SWITCH TO DIESEL MODE.

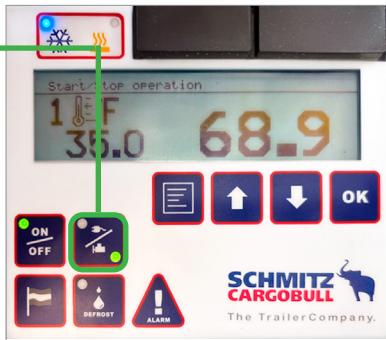

HOW TO: ENABLE ZONE(S)



- 1 PRESS TO SELECT TO TURN ZONE ON

COOL




HEAT

LED WILL DISPLAY IF UNIT IS COOLING OR HEATING TO HIT SETPOINT

- 2 SCROLL **UP/DOWN** TO SET DESIRED TEMPERATURE

- 3 **655MT**: WILL CYCLE THROUGH ZONES IF MORE THAN ONE ZONE IS SELECTED

- 4 PRESS **OK** TO ACCEPT

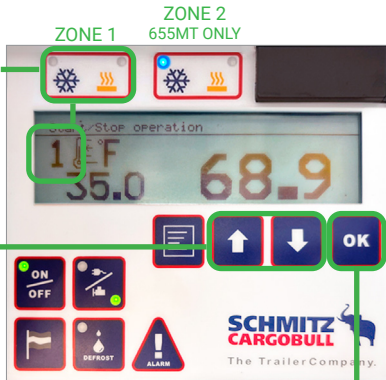

HOW TO: TURN OFF



PRESS TO **POWER OFF** REEFER UNIT
FOR **SOFT SHUTDOWN**. UNIT WILL
PUMP DOWN COMPRESSOR THEN
SHUT OFF 15 SECONDS LATER

- OR, IN AN EMERGENCY -

PRESS TO **POWER OFF** REEFER UNIT
FOR **HARD SHUT OFF**



HOW TO: SELECT MANUAL DEFROST



PRESS TO INITIATE MANUAL DEFROST

NOTE: MANUAL DEFROST
WILL ONLY WORK IF UNIT
TEMPERATURE IS BELOW 26° F



HOW TO:

OPERATE REMOTE EVAPORATOR [MULTI-TEMP OPERATION]




SELECT **ZONE 2 COOL/HEAT MODE**
AND FOLLOW SAME INSTRUCTIONS

ZONE DISPLAYED

ZONE 1
REEFER UNIT
(HOST)

ZONE 2
REMOTE
EVAPORATOR

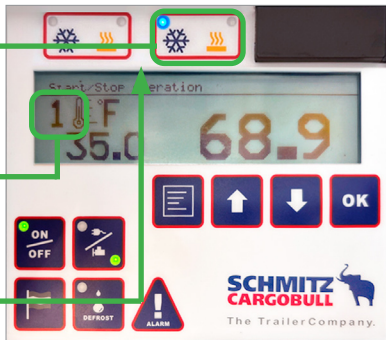

DO NOT CHANGE & ALERTS



ALARM:
UNIT NEEDS ATTENTION


FLAG BUTTON:
WILL CHANGE LANGUAGE
- KEEP DEFAULT TO
ENGLISH



REAR CONTROL PANEL (INTERIOR WALL)



- 1 ZONE 1 REEFER UNIT
- 3 BOX TEMPERATURE
- 4 TEMPERATURE SET POINT
- 5 OFF (0) / ON (1)
- 2 ZONE 2 REMOTE EVAPORATOR
- 6 BOX TEMPERATURE
- 7 TEMPERATURE SET POINT
- 8 OFF (0) / ON (1)
- 9 MENU SELECTOR
- 10 TOGGLE BUTTONS
- 11 CONFIRM/ACCEPT

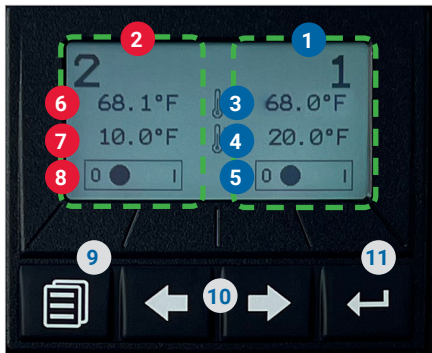

ZONE 2 | ONLY FOR 655MT MULTI-TEMP UNITS

BATTERY MUST BE CHARGED TO OPERATE

HOW TO:

OPERATE REAR CONTROL PANEL



PRESS ANY BUTTON TO WAKE UP

NOTE: IF BATTERY IS RUN-DOWN, OPERATE FROM TRU OR WHEN BATTERY IS CHARGED

CONTINUOUSLY PRESS
THE **MENU** BUTTON TO
NAVIGATE BETWEEN
DIFFERENT SET POINTS,
ON/OFF AND ZONES (ZONE
2 FOR MULTI-TEMP)

ADJUST SETTINGS BY USING
ARROW BUTTONS TO
INCREASE OR DECREASE
TEMPERATURE



TURN **ON/OFF** BY
USING ARROW
KEYS

0 = OFF

1 = ON


AND CONFIRM
(UNIT WILL TURN
ON AFTER A FEW
SECONDS)

CONFIRM TO
ACCEPT CHANGES

FUEL GAUGE INDICATOR



ATTENTION NEEDED:
FUEL IS NEEDED WHEN
FUEL GAUGE IS LIT WITH
RED AT 30%

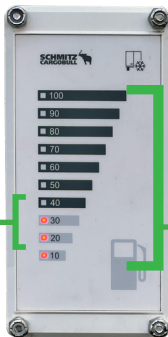

FUEL LEVEL
(IN PERCENTAGE)

ATTENTION NEEDED SHUTDOWN ALERT



FUEL GAUGE LIGHTS FROM BOTTOM TO TOP AND FLASH CONTINUOUSLY
EVERY SECOND

GET TO SERVICE FACILITY AS SOON AS POSSIBLE





VIDEO

How to operate reefer unit



SUPPORT:

(626) 965-1542 • fieldsupport@cargobullna.com

@Cargobull North America, LLC

